 


ASSEMBLY INSTRUCTIONS

Dining Table

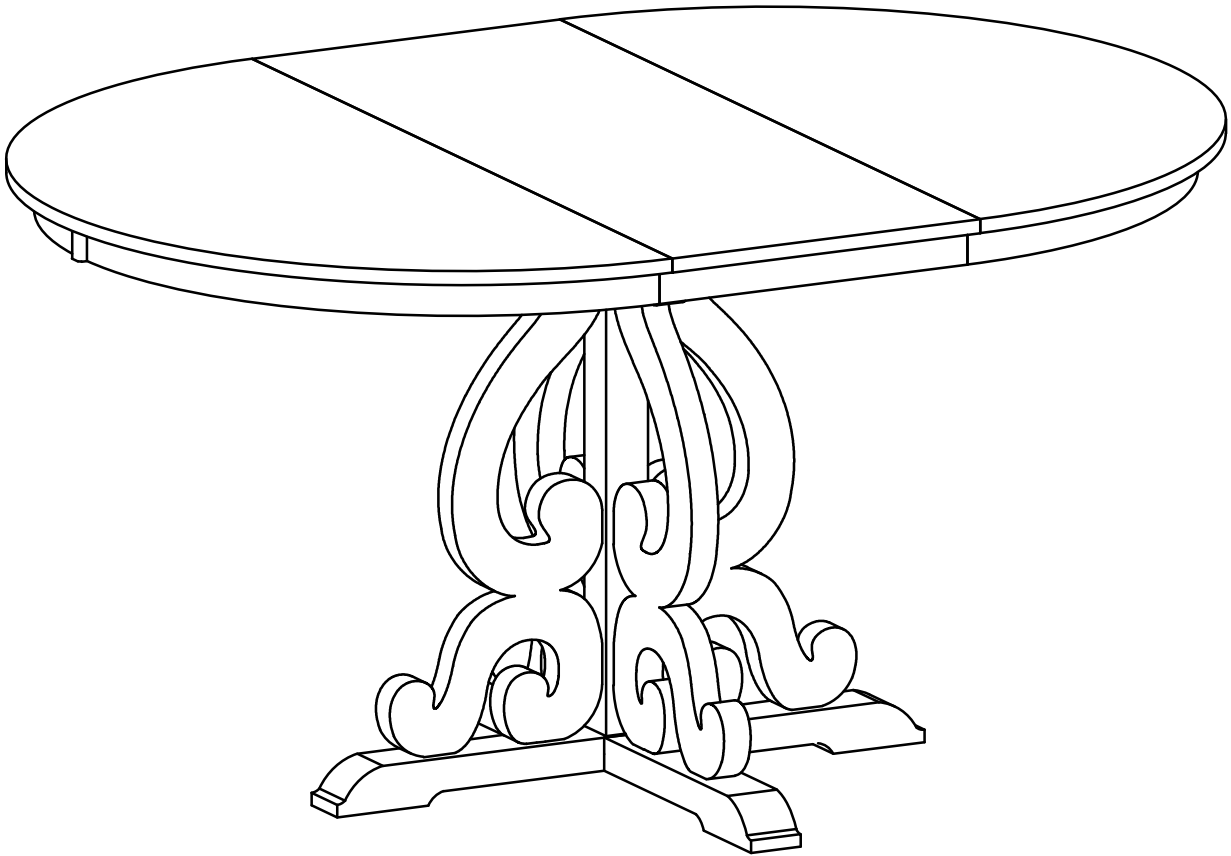

ASSEMBLY INSTRUCTIONS

 
Please read these instructions fully before starting assembly:

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.

ASSEMBLY INSTRUCTIONS

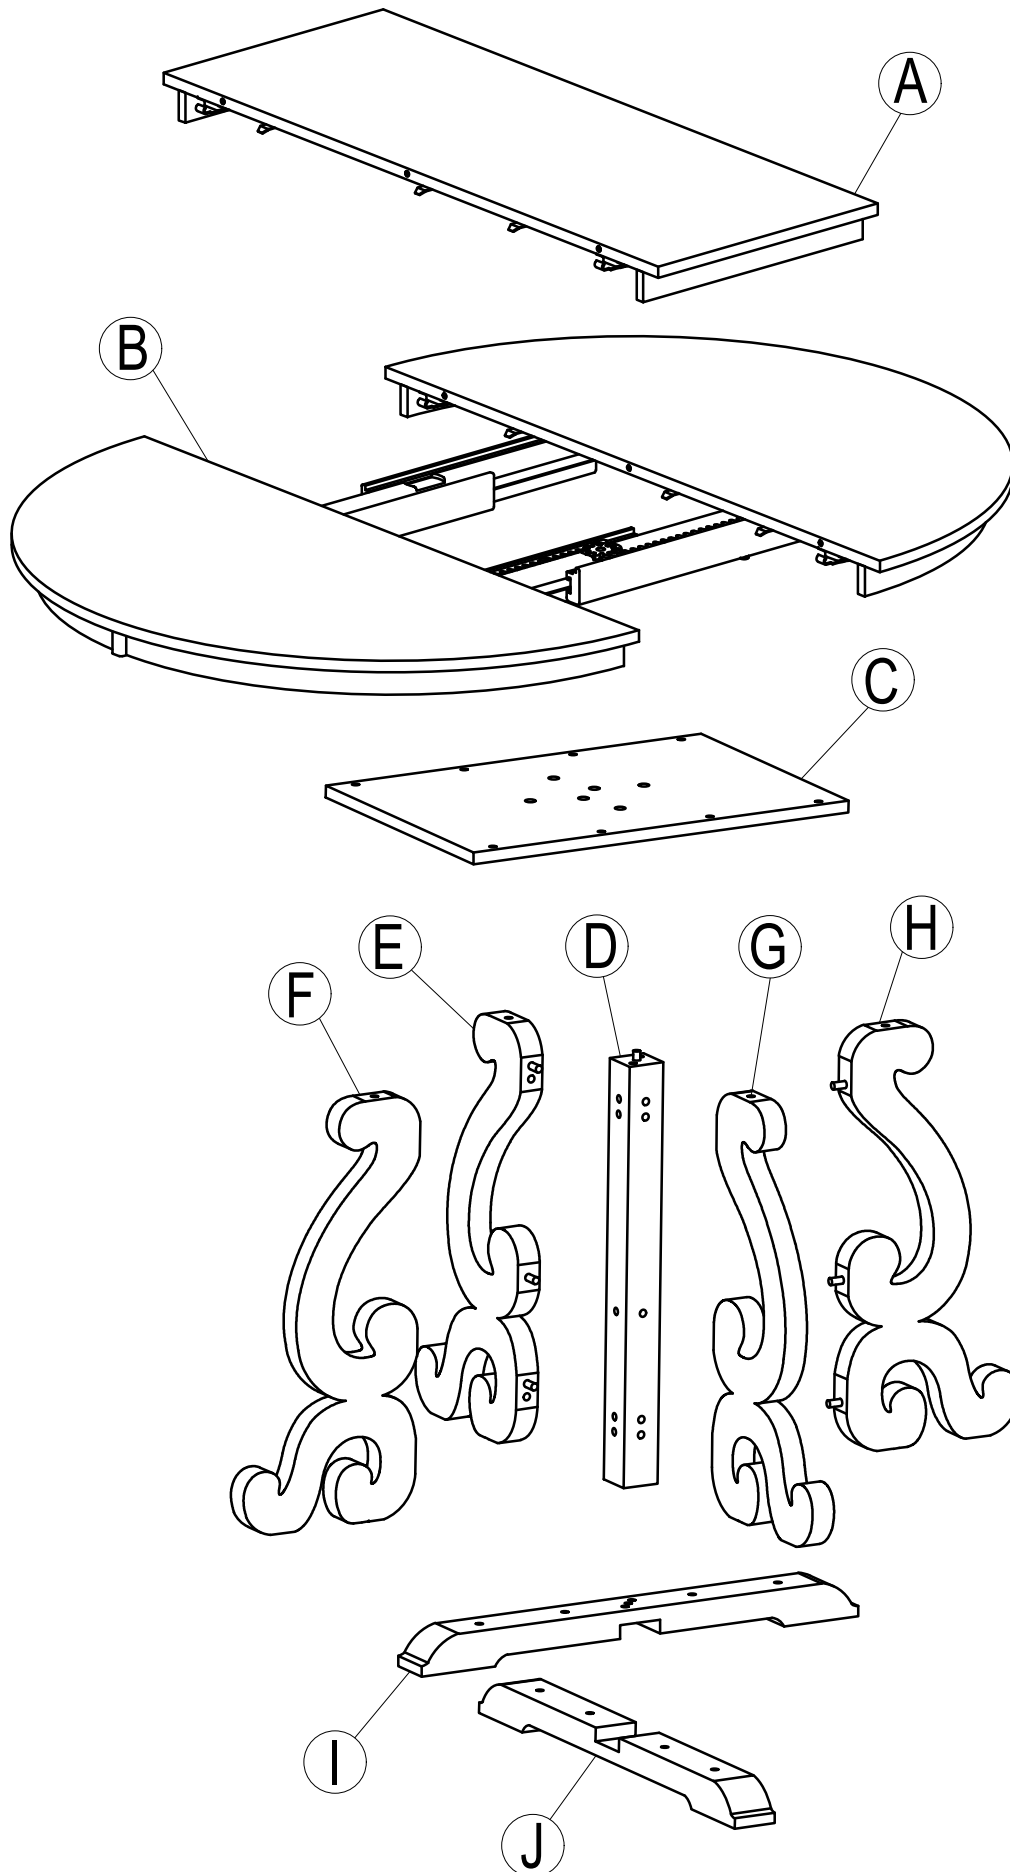

ASSEMBLY INSTRUCTIONS

Part List

(A)

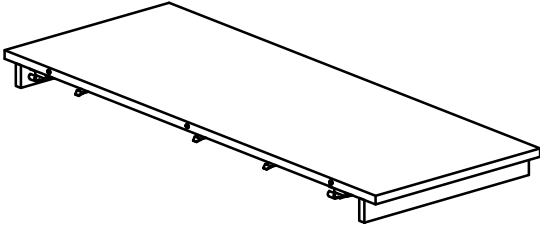 


TABLE TOP BETWEEN (1pc)

(B)


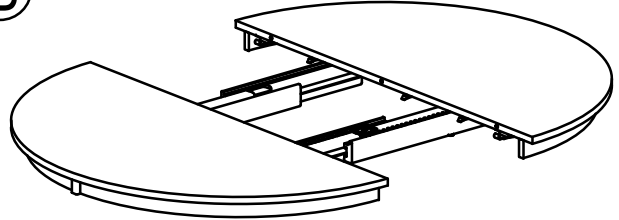 



TABLE TOP SIDE (1pc)

 (C)




PANEL TOP LEG (1pc)

 (D)

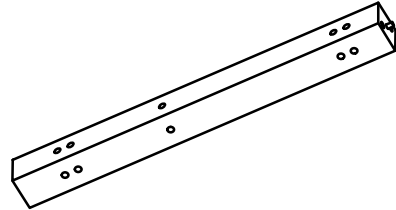


BETWEEN LEG (1pc)

 (E)

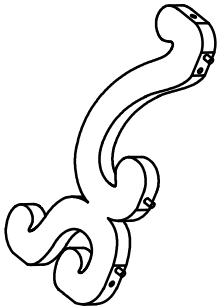


FRONT DECORATIVE COTTON (1 pc)

 (F)

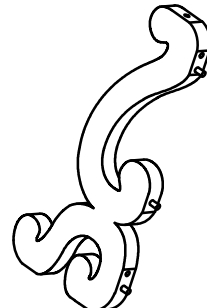

RIGHT DECORATIVE COTTON (1 pcs)

 (G)

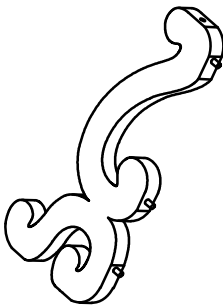


BACK DECORATIVE COTTON (1 pcs)

(H)




LEFT DECORATIVE COTTON (1 pcs)

 (I)



TOP STRETCHER (1pc)

 (J)

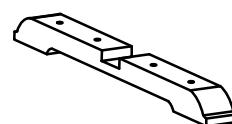


BOTTOM STRETCHER (1pc)

ASSEMBLY INSTRUCTIONS


Hardware List

 ①

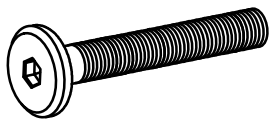

Ø 5/16" x 40 mm
BOLT (14 pcs)

 ②

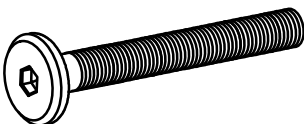

Ø 5/16" x 55 mm
BOLT (14 pcs)

③



Ø5/16" x 13 mm
FLAT WASHER (28 pcs)

 
④



4 mm
ALLEN KEY (1 pc)


ASSEMBLY INSTRUCTIONS

STEP 1:

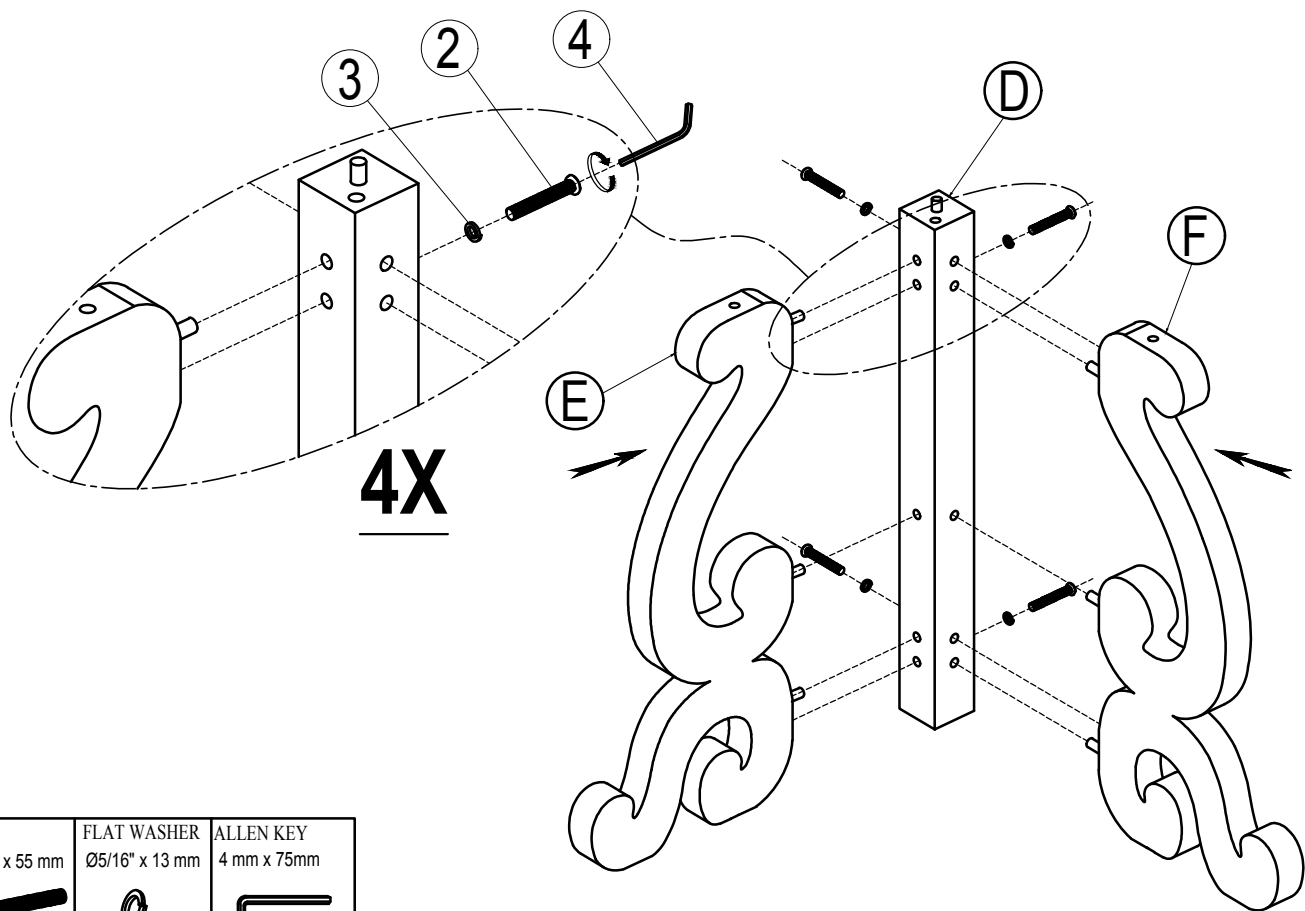


BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 55 mm	Ø5/16" x 13 mm	4 mm x 75mm
		
② x 4	③ x 4	④ x 1

 STEP 2:

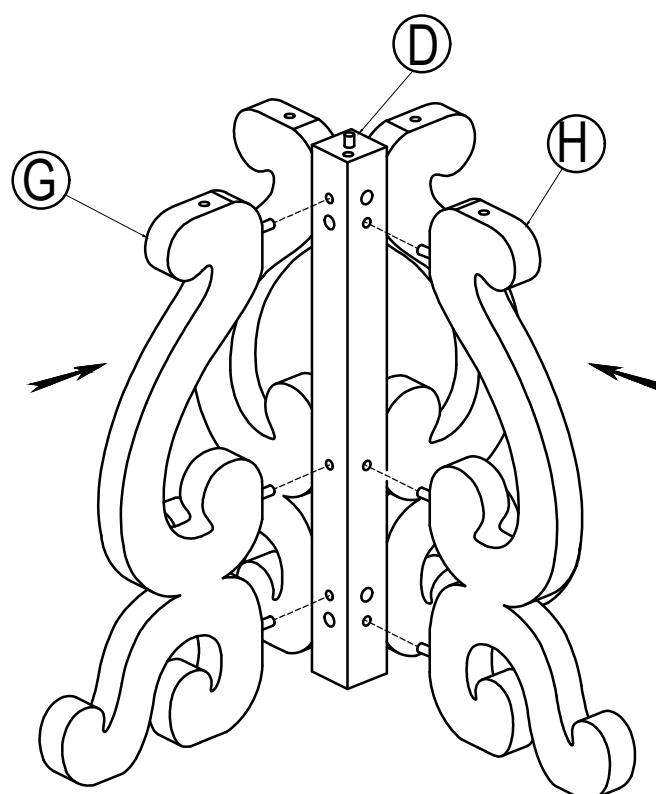


ASSEMBLY INSTRUCTIONS

 STEP 3:

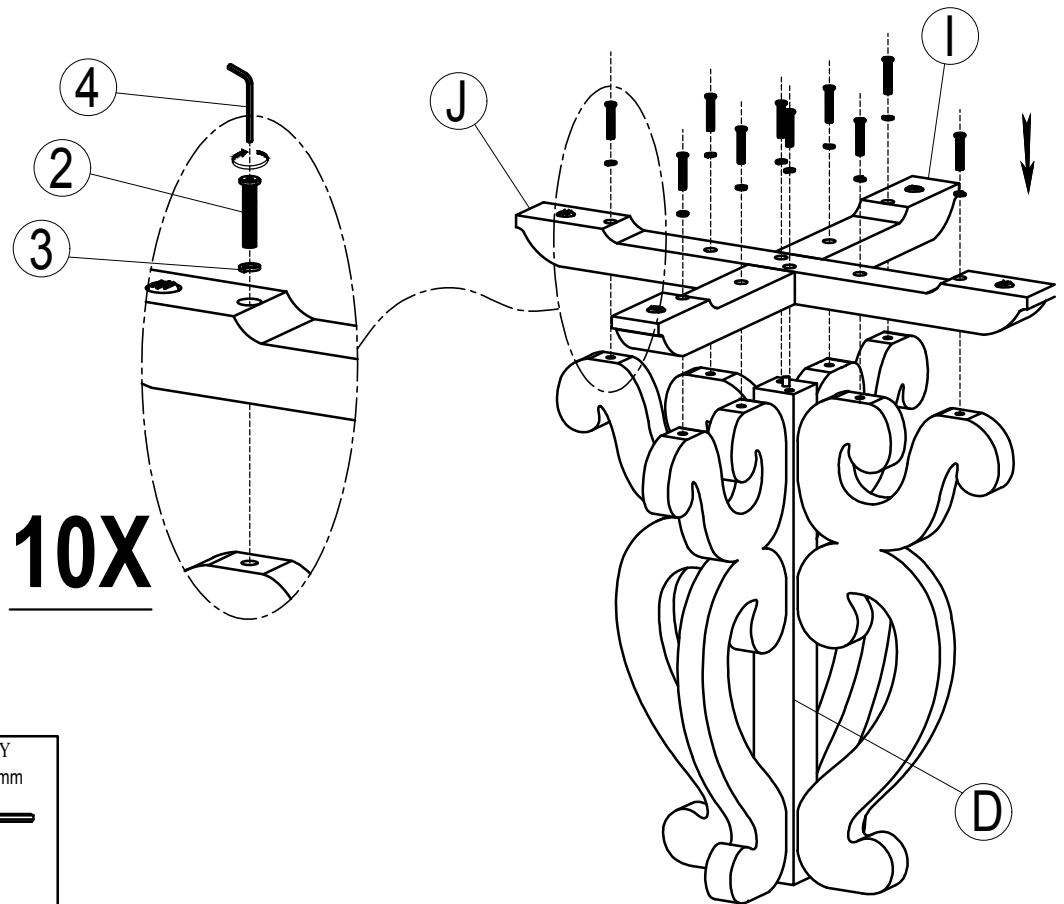

BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 55 mm	Ø5/16" x 13 mm	4 mm x 75mm
		
② x 10	③ x 10	④ x 1

 
STEP 4:

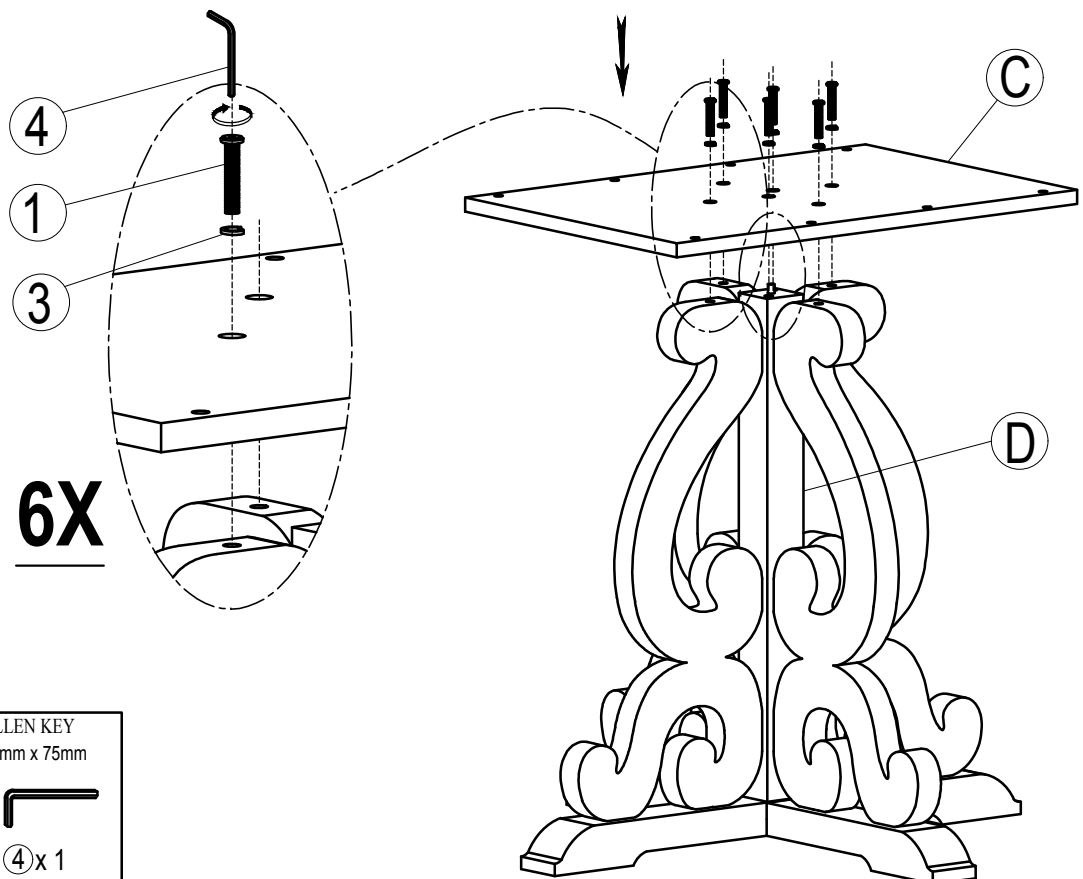

BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 40 mm	Ø5/16" x 13 mm	4 mm x 75mm
		
① x 6	③ x 6	④ x 1

ASSEMBLY INSTRUCTIONS

 
STEP 5:

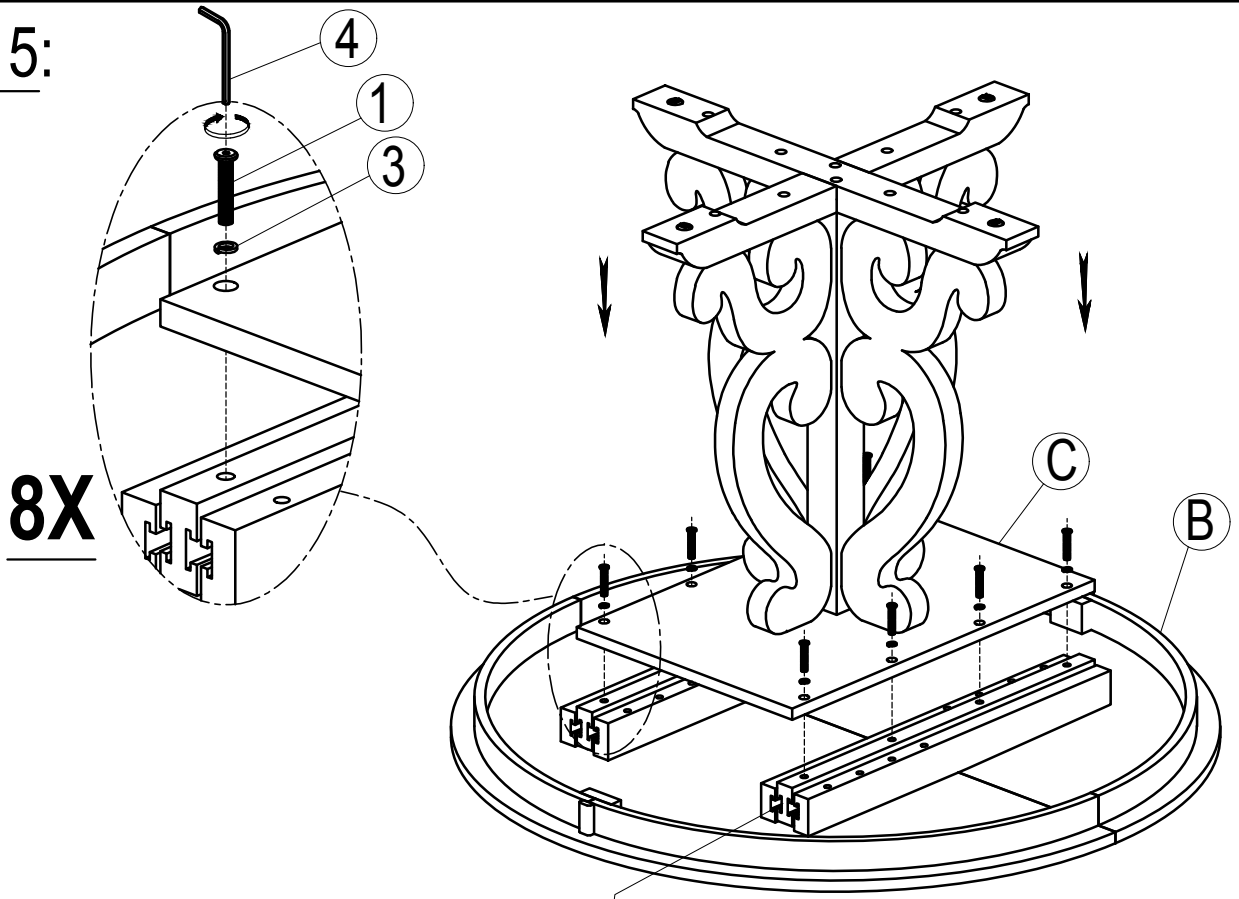

BOLT	FLAT WASHER	ALLEN KEY
Ø 5/16" x 40 mm	Ø5/16" x 13 mm	4 mm x 75mm
		
① x 8	③ x 8	④ x 1



This part of the slide rail can be moved, if the holes are not aligned during the assembly process please try to move the slide rail to the position shown in the figure end then assemble!

 STEP 6:

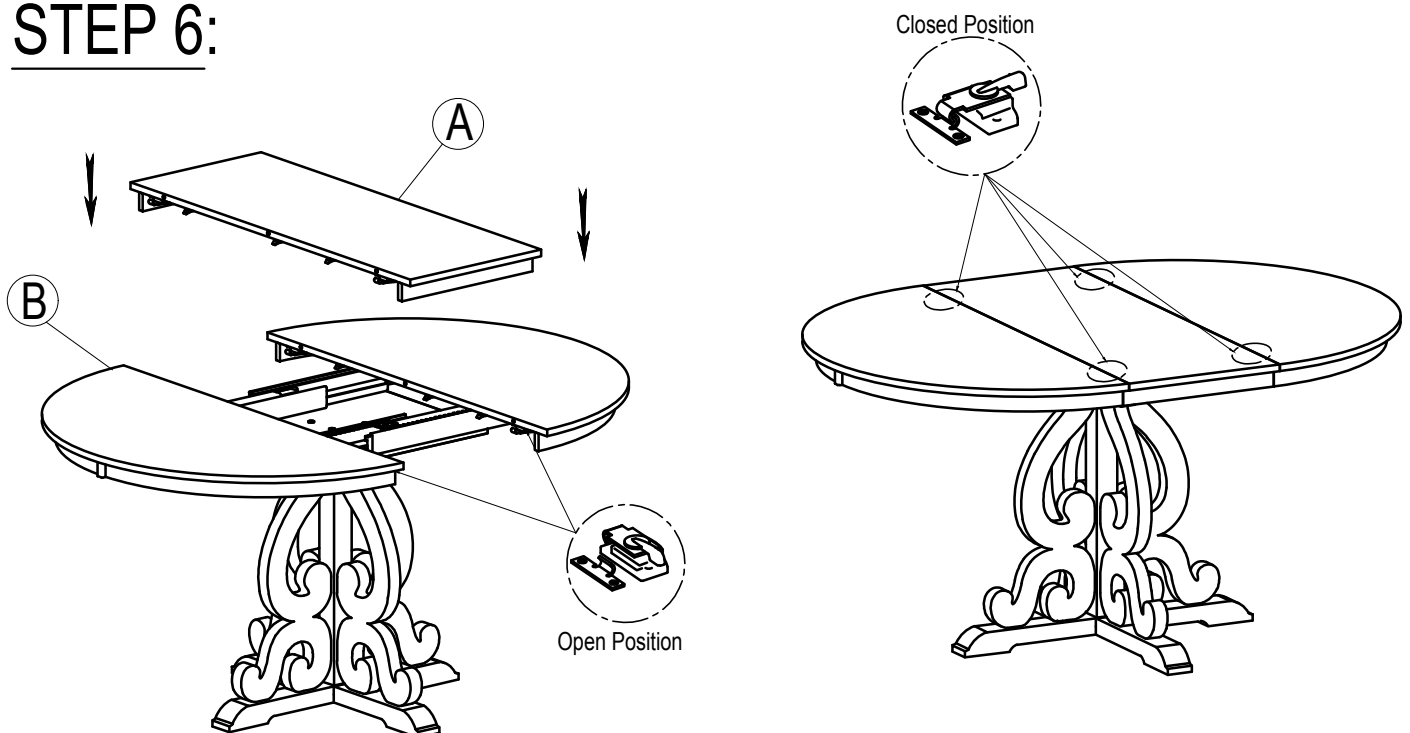

ASSEMBLY INSTRUCTIONS

  
COMPLETE

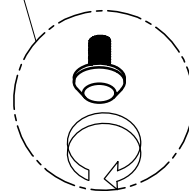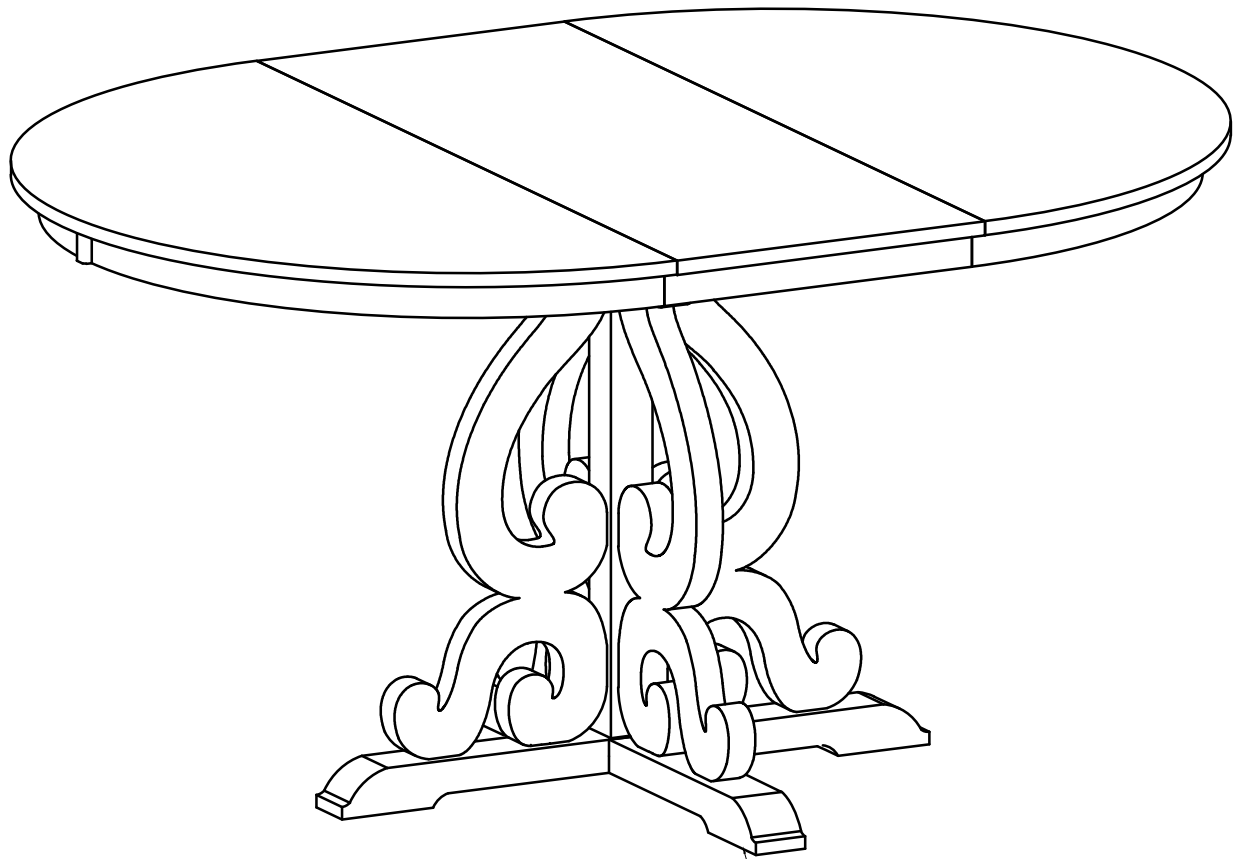

Adjust Leveler = 4 pcs

ASSEMBLY INSTRUCTIONS

 Dining Chair

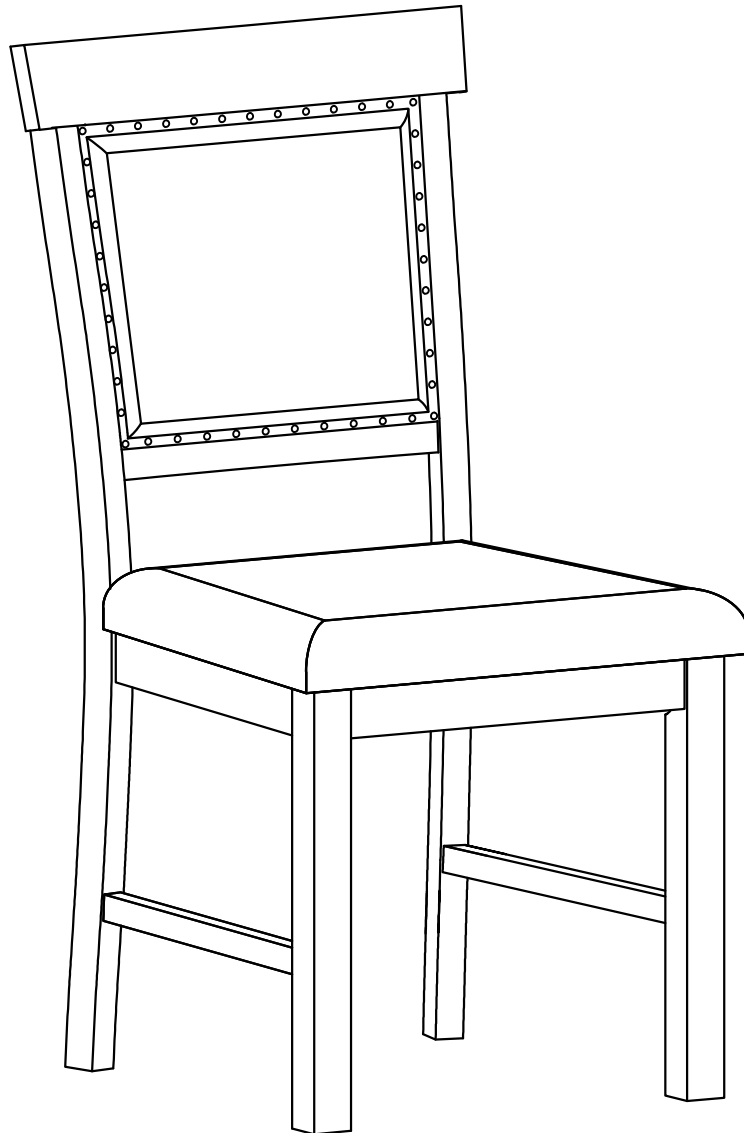

ASSEMBLY INSTRUCTIONS

 
Please read these instructions fully before starting assembly:

1. Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid scratching the parts.
2. Kindly follow the assembly instructions step by step.
3. Do not tighten all screws and bolts until the table is fully assembled.
4. Unscrew the protective plastique supports from the metal insert of the table legs before assembly.
5. Parts of the assembly will be easier with 2 people.

Care and maintenance:

Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.


ASSEMBLY INSTRUCTIONS

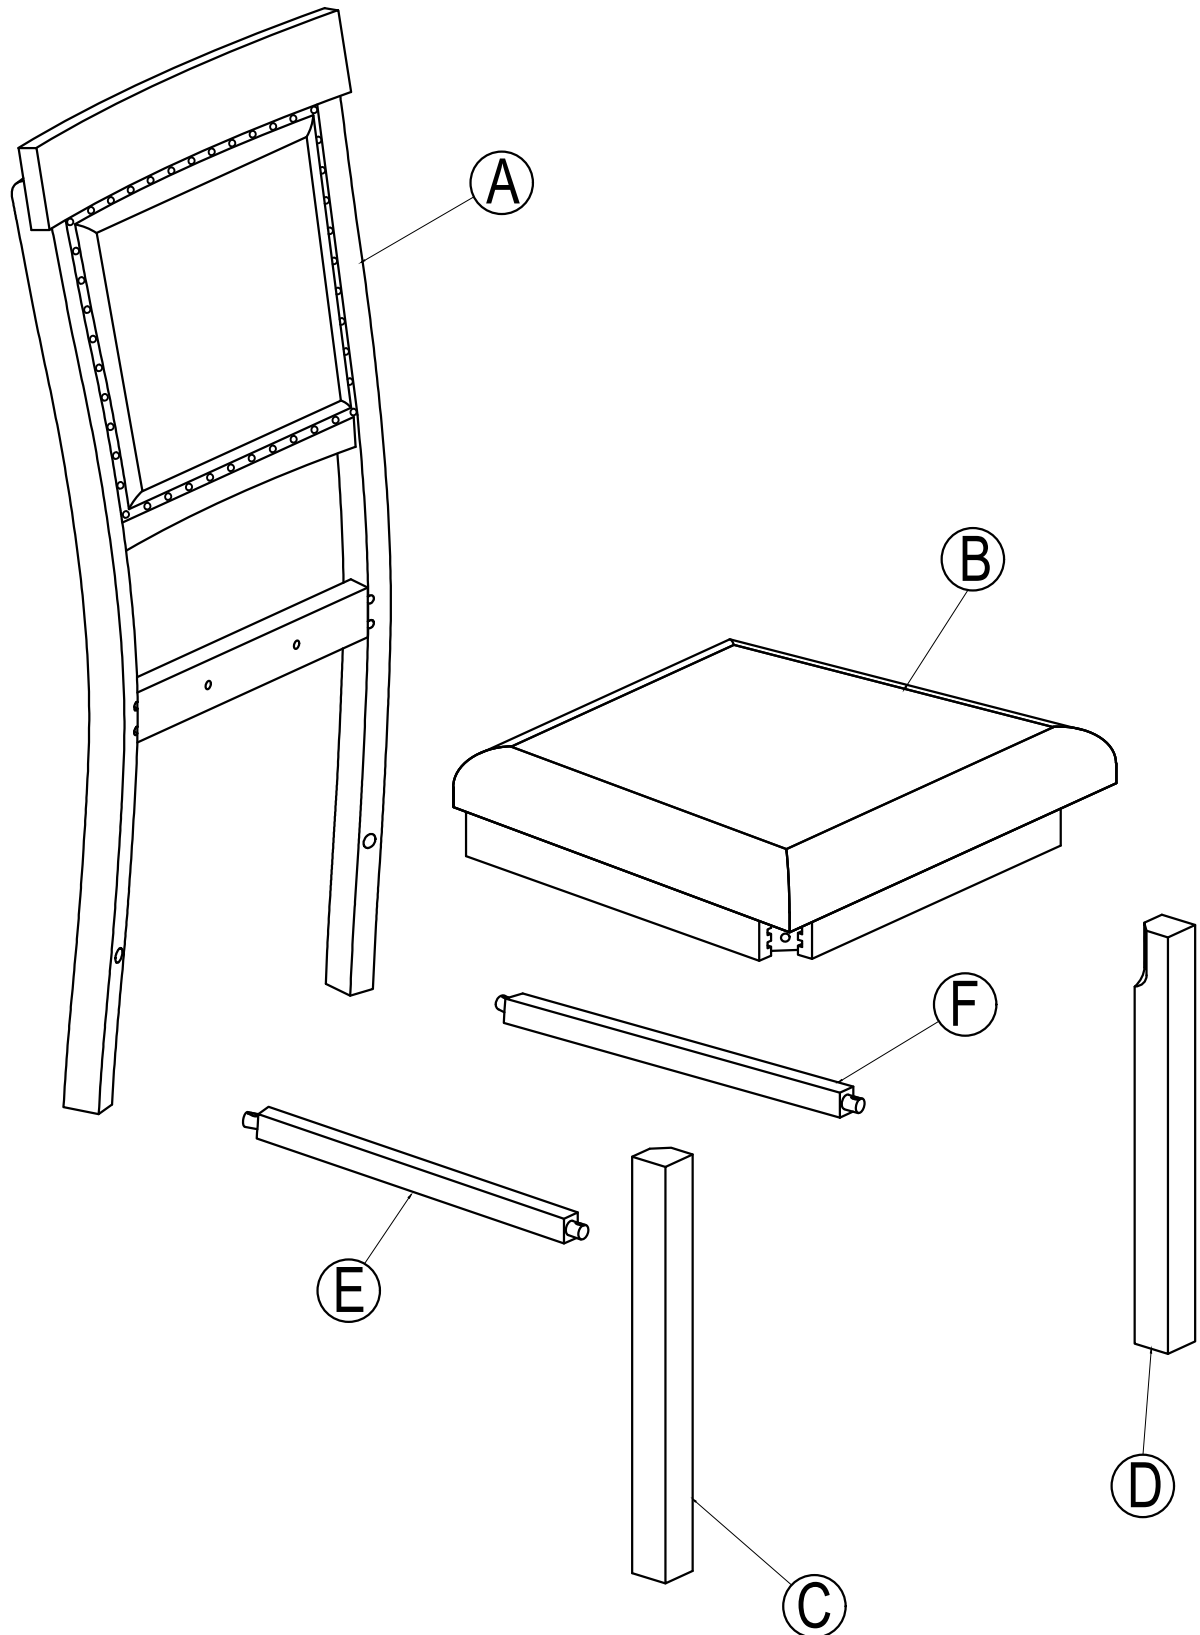

ASSEMBLY INSTRUCTIONS


Part List

 Ⓐ

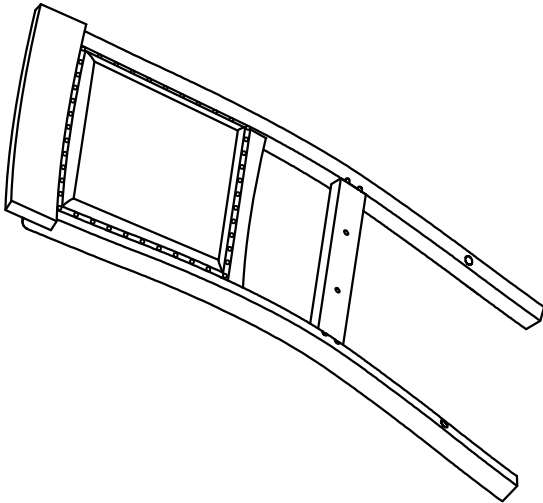


BACK FRAME (4 pcs)

 Ⓑ

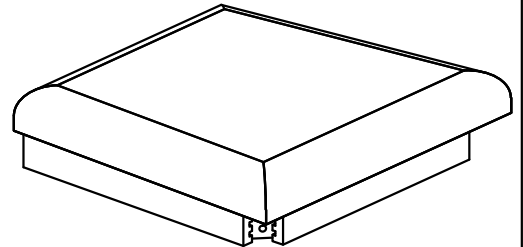


SEAT FRAME (4 pcs)

 Ⓒ

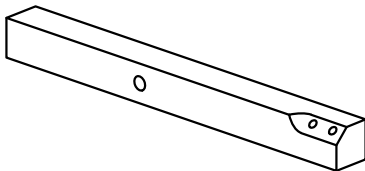


LEG LEFT (4 pcs)

 Ⓓ

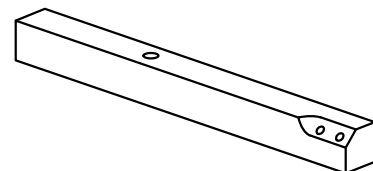


LEG RIGHT (4 pcs)

 Ⓔ

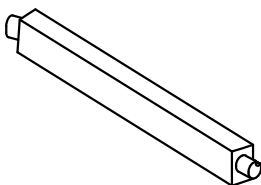

LEFT SIDE STRETCHER (4 pcs)

 Ⓕ

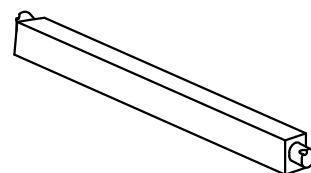


RIGHT SIDE STRETCHER (4 pcs)

ASSEMBLY INSTRUCTIONS

Hardware List

 
①

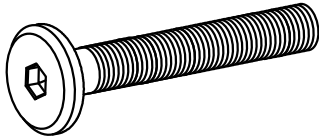

Ø 1/4" x 40mm

BOLT (8pcs)

 
②

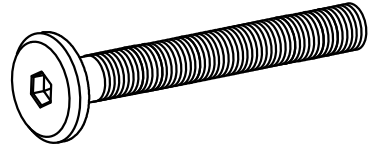

Ø 1/4" x 55mm

BOLT (16 pcs)

 
③

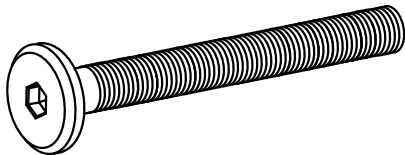

Ø 1/4" x 75mm

BOLT (16 pcs)

 
④



Ø5/16" x 13mm

FLAT WASHER (40 pcs)

 ⑤

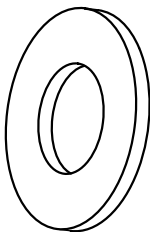

Ø5/16" x 19mm

LOCK WASHER (40 pcs)

 
⑥



4mm

ALLEN KEY (1pc)

⑦




Ø4 x 38mm

WOOD SCREWS (16 pcs)


ASSEMBLY INSTRUCTIONS

 
STEP 1:

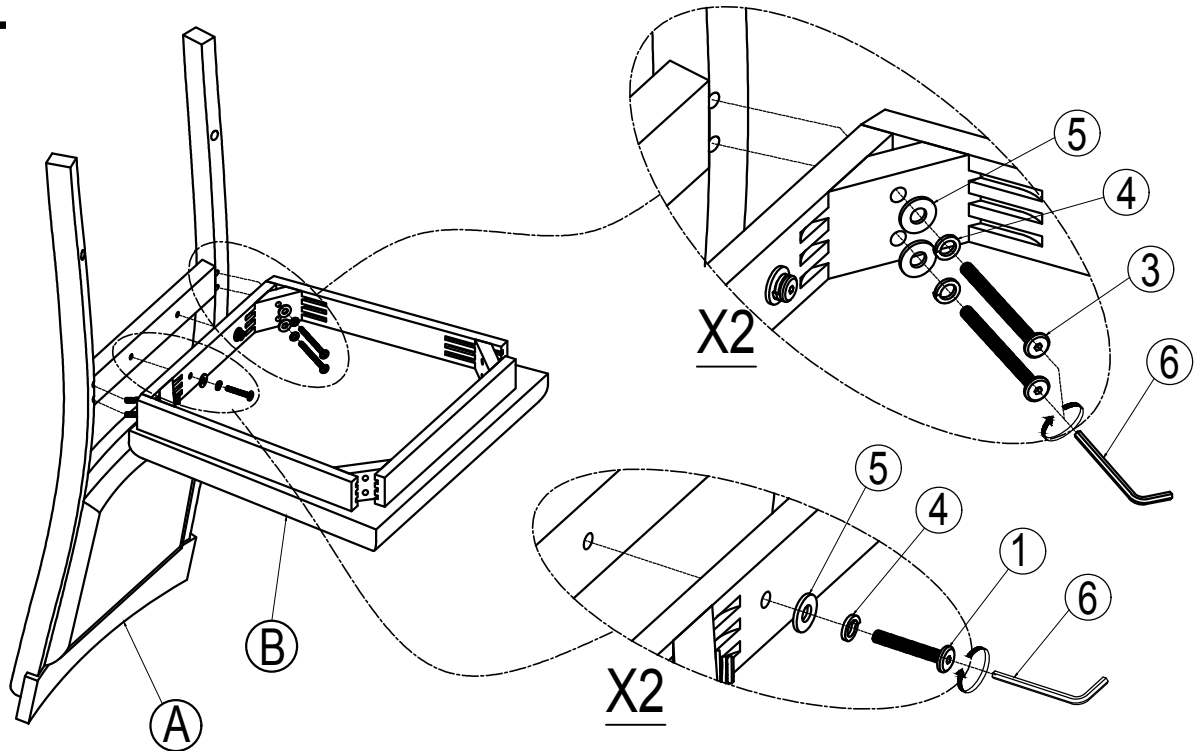

BOLT Ø 1/4" x 40 mm	BOLT Ø 1/4" x 75 mm	FLAT WASHER Ø5/16" x 13 mm	LOCK WASHER Ø5/16" x 19mm	ALLEN KEY 4 mm x 75mm
				
① x 2	③ x 4	④ x 6	⑤ x 6	⑥ x 1

  
STEP 2:

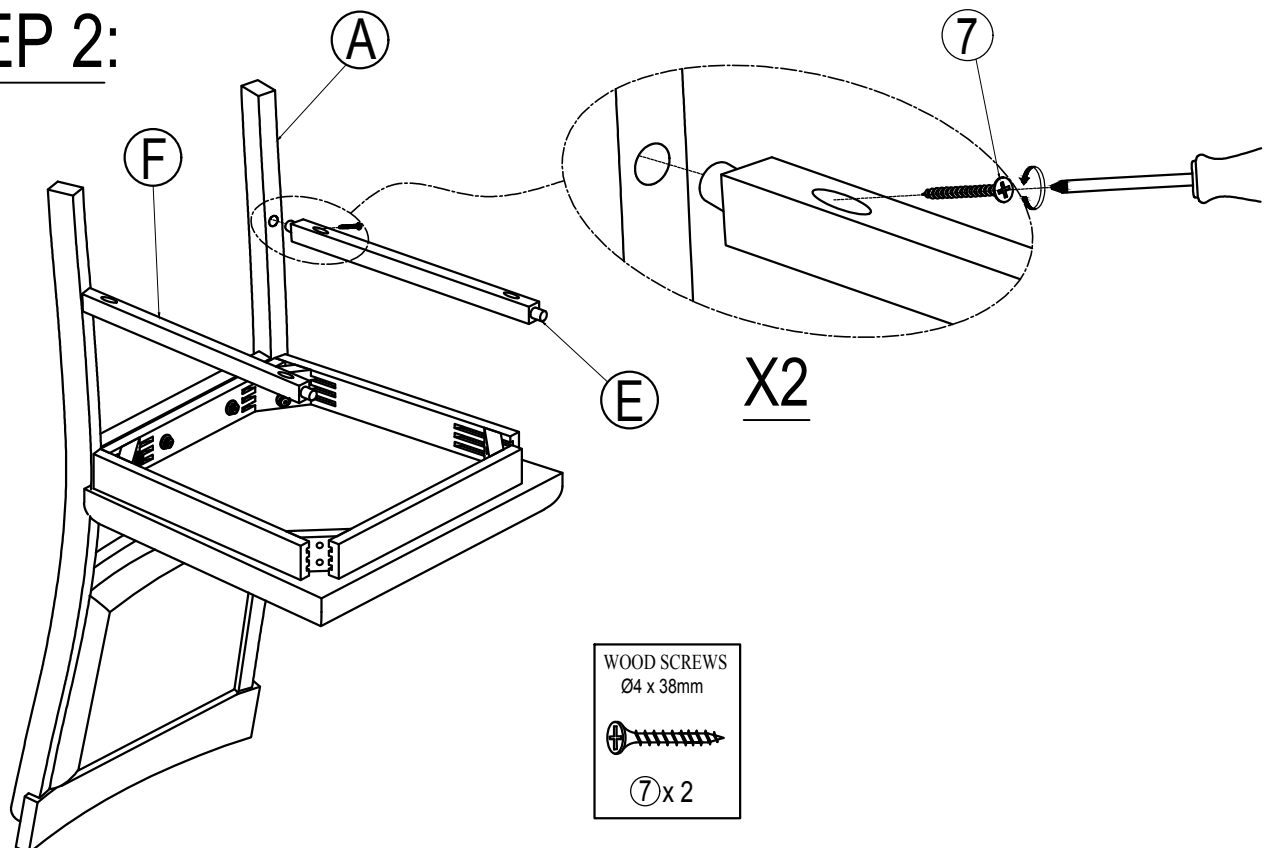

WOOD SCREWS Ø4 x 38mm

⑦ x 2

 ASSEMBLY INSTRUCTIONS

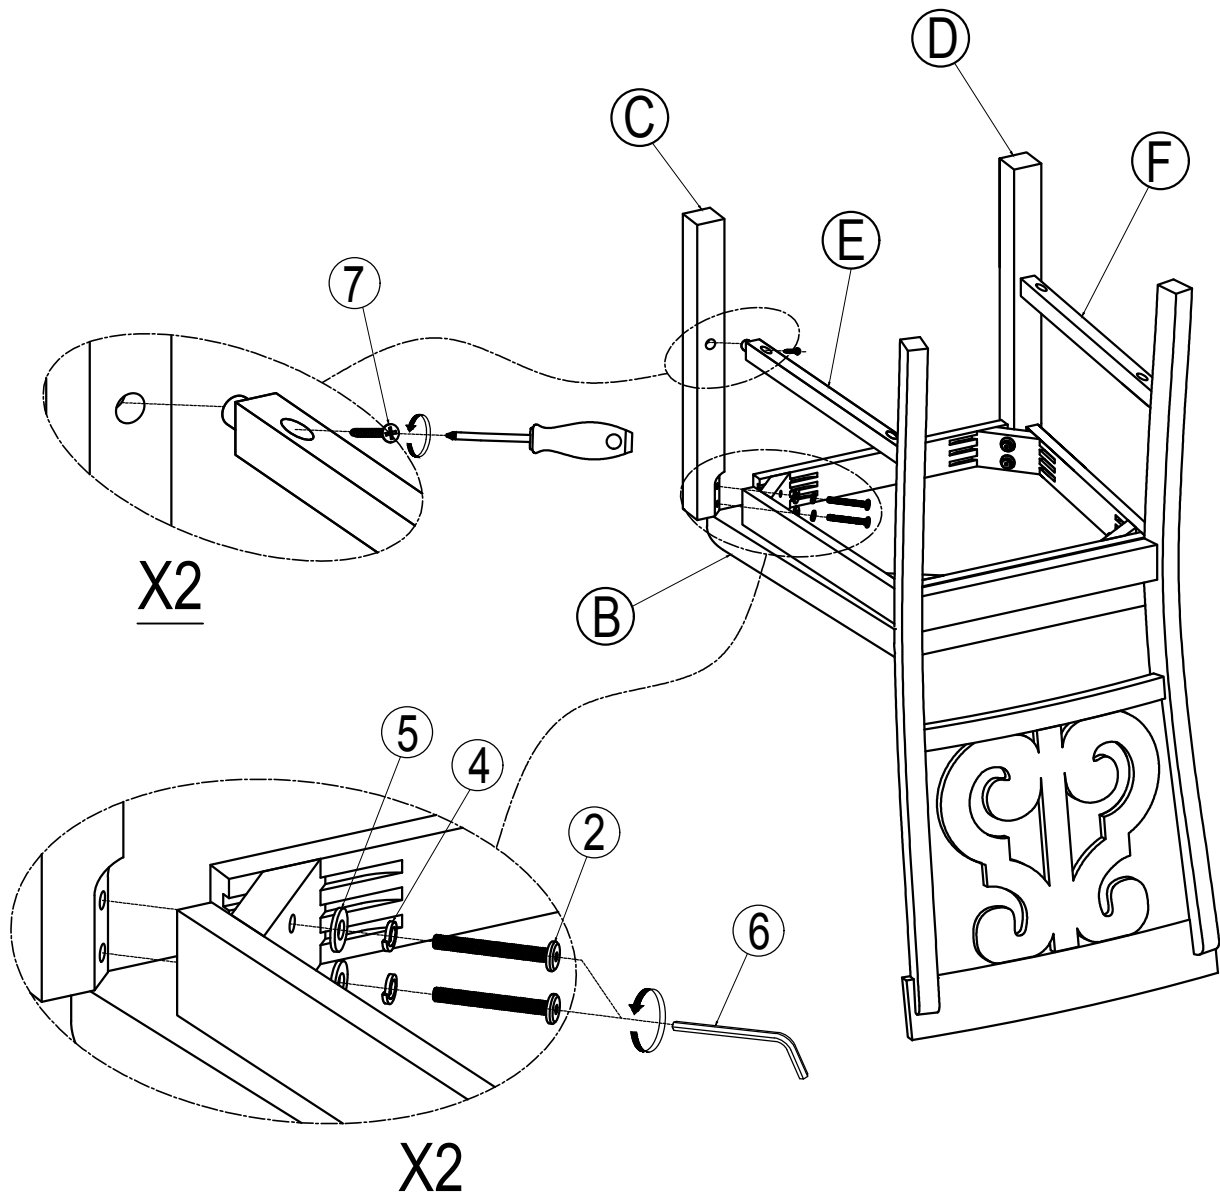STEP 3:



BOLT Ø 1/4" x 55 mm	FLAT WASHER Ø5/16" x 13 mm	LOCK WASHER Ø5/16" x 19mm	ALLEN KEY 4 mm x 75mm	WOOD SCREWS Ø4 x 38mm
				
② x 4	④ x 4	⑤ x 4	⑥ x 1	⑦ x 2

ASSEMBLY INSTRUCTIONS

COMPLETE

